


SELECTING GASOLINE

If you want to start your generator using gasoline, follow steps 1-3, then continue with the remaining steps 4-8 below.

Step 1: Switch the fuel switch to GASOLINE.




Step 2: Check the generator for gasoline. Add as needed.

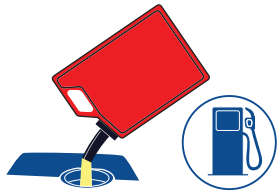


SELECTING PROPANE

If you want to start your generator using propane, follow steps 1-3, then continue with the remaining steps 4-8 below.


Step 1: Switch the fuel switch to PROPANE.

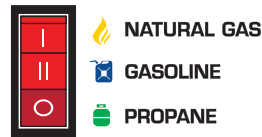

Step 2: Connect the propane line to the quick connect on the front of the generator.

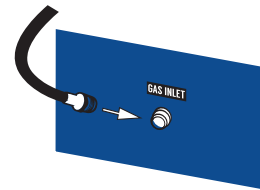


Step 3: Connect the propane line to the propane tank.

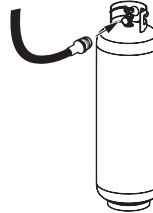


SELECTING NATURAL GAS

If you want to start your generator using natural gas, follow steps 1-3, then continue with the remaining steps 4-8 below.


Step 1: Switch the fuel switch to NATURAL GAS.

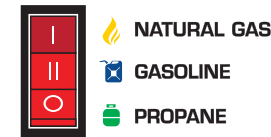

Step 2: Connect the gray gas line to the quick connect on the front of the generator.

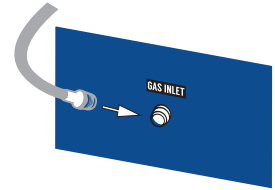


Step 3: Connect the gray gas line to the house quick connect and turn the gas on.

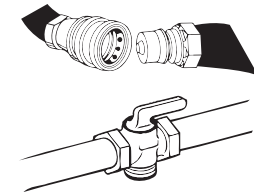


CONTINUE STARTUP STEPS


Step 4: Switch the battery switch to ON.

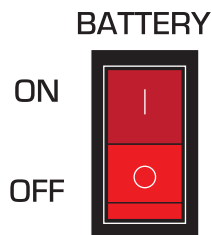


Step 5: Switch the main breaker to OFF.

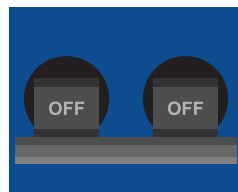

Step 6: Press the start button or use the remote control to start the generator.

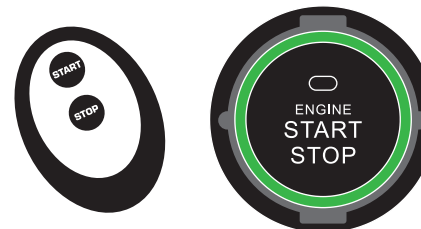

Step 7: Once the generator is running, turn the main breaker to ON and plug devices in.

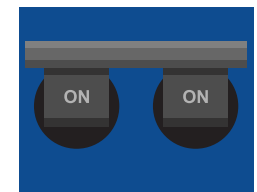

ASSEMBLING YOUR GENERATOR

Step 1: Remove the generator from the box. Flip it over so you can see the underside of the generator.



Step 2: Remove the shipping brace using the included wrenches. Braces can be discarded.



Step 3: Secure the support legs to the frame with the provided lock nuts.



Step 4: Place the smallest washer onto the axle. Insert axle through the frame and secure with the provided nut.



Step 5: Place one of the large washers onto the axles.



Step 6: Place the wheels onto the axles.



Step 7: Place a large washer on the axle.



Step 8: Place the cotter pin through the hole in the end of the axle and bend it out to secure the wheel.



Step 9: Attach the handles to the brackets on the frame using the provided bolts and nuts.



Step 10: Flip the generator upright, on its wheels.



Step 11: Remove the battery cover.



Step 12: Connect the battery terminal.



Step 13: Replace the battery cover.



Step 14: Add oil to the generator.



Note: The following set of instructions are a list of simplified steps to operate your generator. These steps are covered in greater detail within the product manual along with safety warnings, guidelines for maintaining your generator, and details about your generator's warranty.

We strongly recommend reading the entire product manual after assembling your generator to ensure you understand how to operate your generator properly and safely.