FEED BANK 275

Instructions

1- Cover

2- 5/8" Cover Bolts

8-1" Fender Washers

8-1/2 lock washers

1-Feeder

2- Plastic Washers

8-t-style Thumb bolts

4-Feeding Ports

1-Latch

2-Latch Screws

Thank you for purchasing the Feed Bank Feeder. It was designed to create a healthier way to feed your deer. Gravity feeding allows deer to eat to their need and keeps it off the ground for a healthier eating environment. Here a few simple instructions to get your feed bank operational:

- 1. Unpack the Feed Bank from the box. You should have 6 main parts. (Main Body, 4 feed ports, and cover)
- 2. To attach Cover take your 5/8" Phillips head Bolt and run it into the cover. Insert the plastic washer onto the bolt after it has gone through the cover. It will act as a spacer between the cover and the body of the feeder. Screw the bolt into the threaded insert on the feed bank. Repeat to other side of the cover and snug up bolts so cover can swing open.
- 3. To install the feeder port, first take a t-style thumb bold and slide a lock washer on then a fender washer. Take the t-Style Thumb bolt with washers and slide the bolt from the inside of the port out. Match up to the treaded insert at the bottom of the body of the feeder and screw the bolt to it, attaching the feed port. Do the same thing to the second bolt for that feed port. Repeat this for all ports.
- 4. Take the Latch and mount to the front of the feeder. Screw into the wall of the Feed Bank "body" to attach the feeder. Be sure to mount low enough so good tension is applied when the latch is in the closed position. The Latch is designed to catch the notch on the top side of the cover.
- 5. After the cover and Feeder Ports are installed, you need to purchase an 8' Green Treated posts. Dig into the ground 3'and backfill the post so it is level.
- 6: Slide Feed Bank over the post.
- 7. Another option is to cut off a tree and slide it over a trunk of the tree. Just be sure to cut if off level.
- 8. Fill with feed. All feed ports slide in and out, when t-style thumb bolt is loosened, to control flow. Set flow according to type of feed you are using.
- 9. Your Feed Bank is ready to go!

BANKS OUTDOORS

31785 64th Avenue Cannon Falls, MN 55009

800-262-4129 www.banksoutdoors.com info@banksoutdoors.com